

■ Assembly instructions

Frame T-17


A) Supplied material



- 4 extrusions T-17
- 4 brackets (connectors for corners)
- 1 Allen key
- 1 printed canvas



Voir vidéo sur notre chaîne!
Cliquez ici!

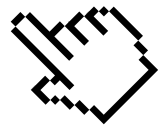

B) Mounting the frame



1. Position flat on a table the extrusions of the four sides to assemble the frame. Insert one bracket at each corner. Just slide it into the groove of the extrusion.
2. Assemble all the frame, then securely screw each junction using the Allen key.

C) Installing the canvas in the frame



3. To install the canvas, start by folding the silicone keder from the inside, on each side of the corner, then insert the silicone keder into the slot of the frame. Finally put each corner of the canvas in the frame.
4. Then push in the central part of the silicone keder on each of the four sides. Finish by smoothing the perimeter of the canvas so that the silicone is pressed evenly all over. To remove the canvas, pull on the M&M Graphic label then the canvas will easily come off the frame.